 



KEYTEC DUO Installation Quick Guide – see user's manual for more details.

The main parts of DUO are a receiver station, a deco fixture and a pen. Remove the release paper from the back of the deco fixture, adhere it to the back at top center position of a laptop computer, or directly on the top center position for desktop LCD or all-in-one PC which has deeper frame width. Attach the receiver station to the deco fixture by the the magnet built in with the receiver.

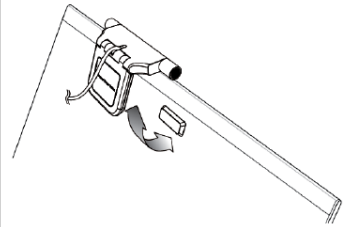

Plug the USB cable into USB port on your computer.


 
Note: DUO is designed to work up to 17" (diagonal) screen, but it may work up to 19" with the potential of losing a little accuracy near the top corners.

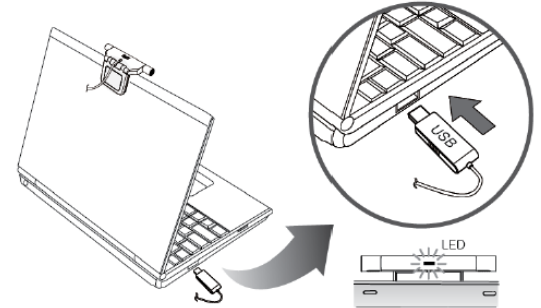

Remove the cap at the end of the pen.

Insert 3 x LR41 batteries with + side facing up.

  
Replace the cap.

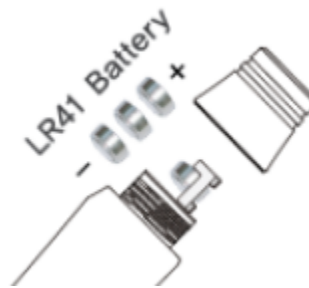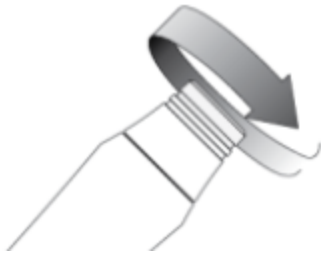

The new batteries should last about 30 hours of continuous use. The power will be automatically turned off when the pen is inactive for more than 30 seconds.

Press the pen tip on the display or press the lower button on the pen will activate the left mouse click. Press the upper button on the pen will activate the right mouse click. Press pen tip to the display and drag to perform drawing and dragging functions.

 The pen tip does not scratch the display surface. However, you may laminate a transparent protective film over the display for further protection.

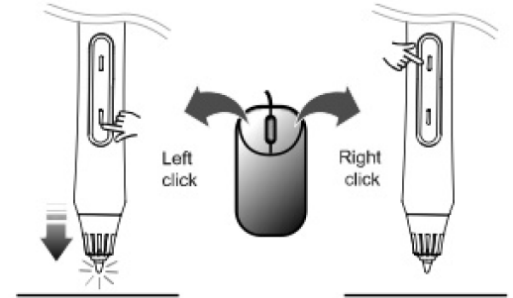

The pen tip can be easily replaced with a pen tip holder provided. You may also replace the soft pen tip with the ballpoint pen tip for writing on a piece of paper with a clip board using MINT Note functions – see reverse side for instructions.
Caution: Never use ballpoint pen tip on your laptop or display surface.



 








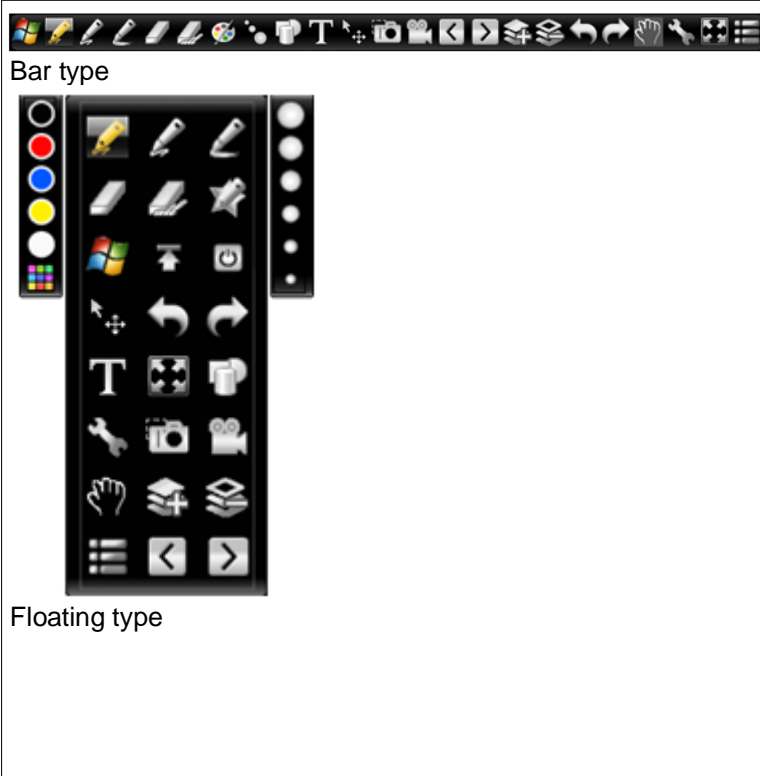


Insert the CD, click on **Install** to start software installation. If auto run does not work, Run POPStarter.exe from CD. It is better to have the computer connected to the Internet for update information.

After installation is completed, 3 icons will appear on the desktop: MINT Control, MINT Interactive and MINT Note.



Open MINT Control to run a 4-point calibration program by touching the center of each circle with the pen. Check the accuracy of pen touch which should match to the mouse cursor position. Recalibrate if the accuracy is not satisfactory.

MINT Interactive is an interactive whiteboard software. Double click the Mint Interactive icon to run the program. There are two ways to display the tool bars – Bar type or Floating type.

 <p>Bar type</p> <p>Floating type</p>	<ul style="list-style-type: none">  Toggle between MINT Interactive and Window mode.  Pencil, highlighter, brush.  Erasers.  Color, size, shapes/lines/diagrams.  Text input, edit.  Screen capture, recording.  Previous page, next page.  Insert new page, delete selected page.  Redo, undo.  Shift window, tool & utility.  Shift & zoom, setup options.
-----------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

How to use MINT Note?

Double click MINT Note icon to open its workspace.

 Click on this icon to select  (clip) or  (non clip).

When using clip mode, clip the receiver station on a piece of paper. Select paper size. Change the soft pen tip to ballpoint pen tip if you want to see what you write and draw on the paper. Your drawing and writing will show on the computer display simultaneously.

When using non click mode, just place the receiver station on top of the paper and define the paper size in user-defined size.

Use  and  to swap between pen mode and mouse mode.



Contact Information:

KEYTEC, INC. 520 Shepherd Drive, Garland, Texas, USA 75042 Tel: 972-272-7555 or 800-624-4289 Fax: 972-272-7501
Office Hours: 8:30AM – 5:00PM CST Monday – Friday.

Homepage: www.magictouch.com DUOpage: <http://www.magictouch.com/duo.html>

Email:

for information: info@magictouch.com

for sales inquiry: sales@magictouch.com

for tech support: tech@magictouch.com.

Join KEYTEC facebook for special discounts and free prizes: <http://www.facebook.com/Keytec>.